








# ASSEMBLY INSTRUCTION

## LOT# FPF18-0077-KD


### PARTS LIST

PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 1/4"		8	E	FRONT LEG		2
B	LOCK WASHER 1/4"		8	F	BACK LEG		2
C	BOLTS DIA 1/4"X2-1/4"		8	G	CHAIR BACK		1
D	ALLEN WRENCH 1/4"		1				

Note: Do Not tighten bolts until assembly is fully completed.

#### STEP 1.

Remove all parts from carton and separate them into part number groups as indicated on the part list. Place the chair back (G) on a smooth flat surface with the holes facing up. Loosely tighten all bolts until instructed to fully tighten at the end of step.

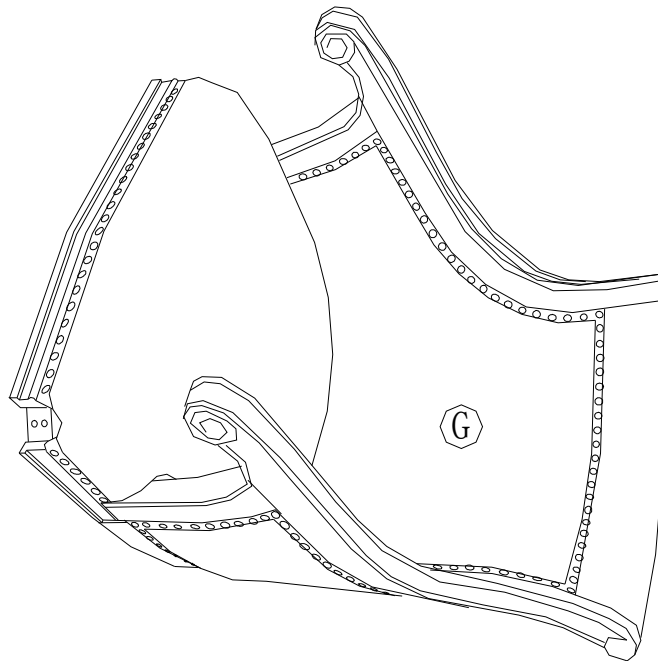


# ASSEMBLY INSTRUCTION

## LOT# FPF18-0077-KD


### STEP 2.

Attach back leg (F) to chair back (G) using flat washer (A) lock washer (B) and bolts (C). Tighten slightly not fully.

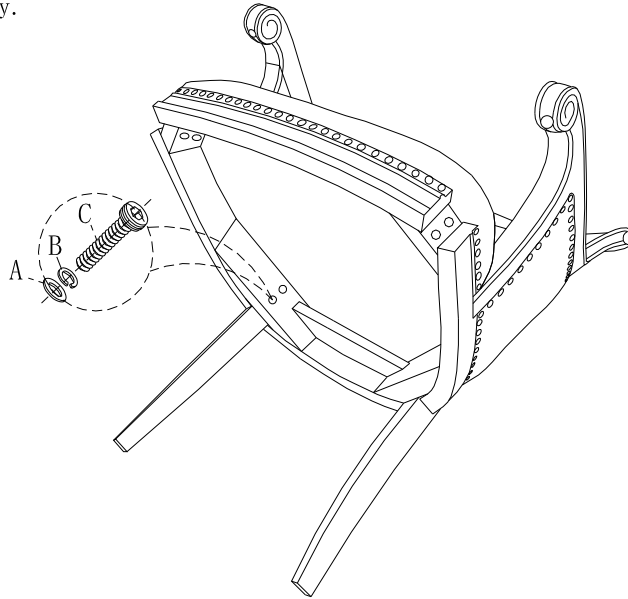

### STEP 3.

Attach front leg (E) to chair back (G) using flat washer (A) lock washer (B) and bolts (C). Tighten slightly fully.

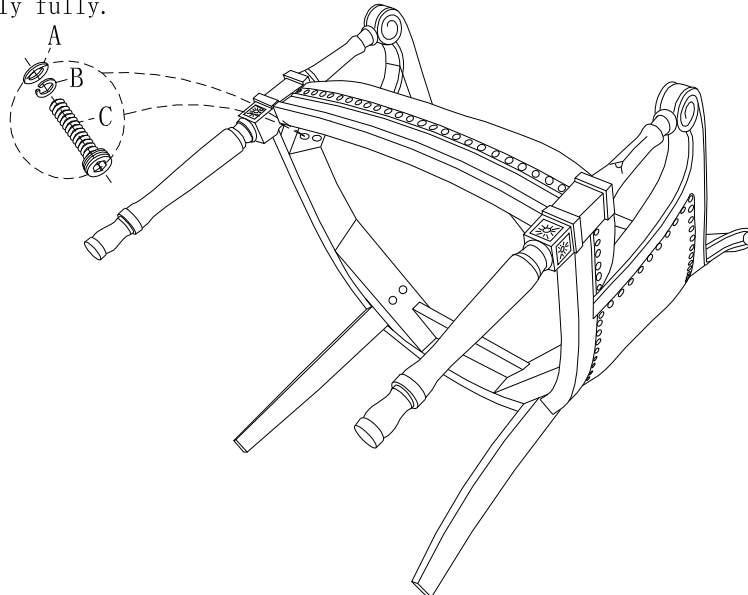

Warnings : Failure to observe these warnings can result in serious injury and/or product damage:

- \* Never stand on the chair.
- \* Never use the chair as a ladder.
- \* Do not tip the chair when seated.
- \* Periodically re-tighten all bolts.