






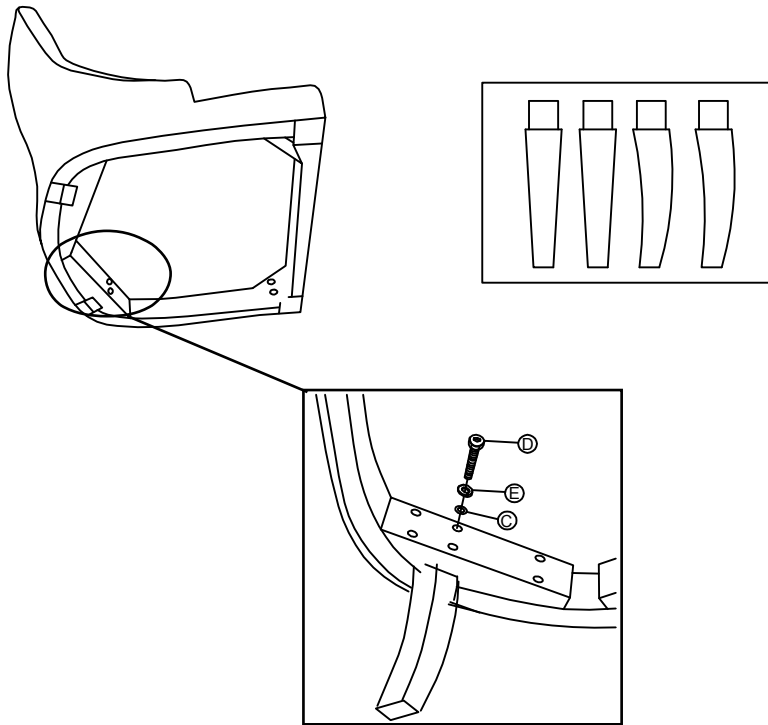


# ASSEMBLY INSTRUCTION

## Haven Dining Chair


PARTS LIST			
PARTS	DRAWING	PARTS NAME	QTY
A		Chair	1
B		Allen Wrench(5/16")	1
C		Big Flat Washer (5/16"×3/4")	8
D		Bolts Dia (5/16"×2-1/4")	8
E		Lock Washers (5/16")	8
F		Front Legs	2
G		Back Legs	2

Step 1. Turn the chair upside down and lay on protective carpet



Step 2: Insert flat washer lock washer and bolts through corner block to back legs.  
 Insert flat washer lock washer and bolts through corner block to front legs.  
 Use allen wrench to secure bolts.

Attention: The back legs are marked as L and R, please insert to the right place.

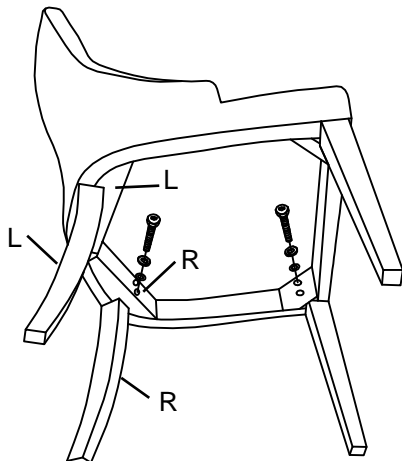

Step 3: Turn the chair over

