



 
 



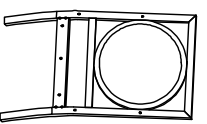

 



 



ASSEMBLY INSTRUCTION

LOT# HY-08053 ACCENT CHAIR

PARTS LIST

PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 5/16"X 3/4"		9	K	Plug		4
B	LOCK WASHER 5/16"		9	L	LEFT ARM		1
C	BOLTS DIA 5/16"X3-1/2"		4	M	RIGHT ARM		1
D	BOLTS DIA 5/16"X2-3/4"		4	N	CUSHION		1
E	BOLTS DIA 5/16"X1 1/2"		1	O	CHAIR BACK		1
F	ALLEN WRENCH 5/16"		1	P	WOOD SCREW		4
G	FLAT WASHER 1/4"X 5/8"		4	Q	SEAT FRAME		1
H	LOCK WASHER 1/4"		4				
I	BOLTS DIA 1/4"X1 1/2"		4				
J	ALLEN WRENCH 1/4"		1				

Note: Do Not tighten bolts until assembly is fully completed.

STEP 1.

Remove all parts from carton and separate them into part number groups as indicated on the part list. Place the chair back (O) on a smooth flat surface with the holes facing up. Loosely tighten all bolts until instructed to fully tighten at the end of step.

