










 


 
 


ASSEMBLY INSTRUCTION

LOT# FKF001 TRC ACCENT CHAIR

PARTS LIST							
PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 5/16"X 3/4"		9	J	WOOD SCREW		4
B	LOCK WASHER 5/16"		9	K	PLUG		2
C	BOLTS DIA 5/16"X2-1/4"		8	L	LEFT ARM		1
D	BOLTS DIA 5/16"X1-3/4"		1	M	RIGHT ARM		1
E	ALLEN WRENCH 5/16"		1	N	CUSHION		1
F	FLAT WASHER 1/4"X 5/8"		2	O	SEAT FRAME		1
G	LOCK WASHER 1/4"		2				
H	BOLTS DIA 1/4"X1 3/4"		2	P	CHAIR BACK		1
I	ALLEN WRENCH 1/4"		1				

Note: Do Not tighten bolts until assembly is fully completed.

STEP 1.

Remove all parts from carton and separate them into part number groups as indicated on the part list. Place the chair back (P) on a smooth flat surface with the holes facing up. Loosely tighten all bolts until instructed to fully tighten at the end of step.

