

















# ASSEMBLY INSTRUCTION

## 2322SFEB MALIBU ACCENT CHAIR


### PARTS LIST

PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 5/16" X 3/4"		9	J	ALLEN WRENCH 5/16"		1
B	FLAT WASHER 1/4" X 3/4"		2	K	ALLEN WRENCH 1/4"		1
C	LOCK WASHER 5/16"		9	L	WOOD PLUG 25/32"		2
D	LOCK WASHER 1/4"		2	M	ARM		2
E	BOLTS DIA 5/16" X 3"		4	N	CUSHION		1
F	BOLTS DIA 5/16" X 2"		4	O	SEAT FRAME		1
G	BOLTS DIA 5/16" X 1 3/4"		1	P	BACK		1
H	BOLTS DIA 1/4" X 1 1/2"		2				
I	WOOD SCREW		5				

**Note: Do Not tighten bolts until assembly is fully completed.**

#### STEP 1.



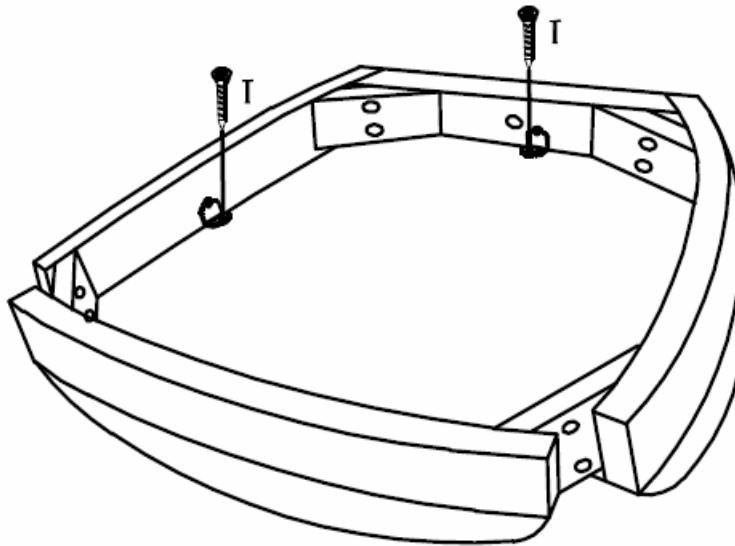













Remove all parts from carton and separate them into part number groups as indicated on the part list. Place the Cushion (N) on a smooth surface. Attach Seat Frame (O) to Cushion (N) using Wood Screw (I).



# ASSEMBLY INSTRUCTION


## 2322SFEB MALIBU ACCENT CHAIR

### PARTS LIST

PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 5/16" X 3/4"		9	J	ALLEN WRENCH 5/16"		1
B	FLAT WASHER 1/4" X 3/4"		2	K	ALLEN WRENCH 1/4"		1
C	LOCK WASHER 5/16"		9	L	WOOD PLUG 25/32"		2
D	LOCK WASHER 1/4"		2	M	ARM		2
E	BOLTS DIA 5/16" X 3"		4	N	CUSHION		1
F	BOLTS DIA 5/16" X 2"		4	O	SEAT FRAME		1
G	BOLTS DIA 5/16" X 3/4"		1	P	BACK		1
H	BOLTS DIA 1/4" X 1 1/2"		2				
I	WOOD SCREW		6				


#### STEP 1.

Remove all parts from carton and separate them into part number as indicated. Place the chair back on a smooth flat surface with holes facing up.

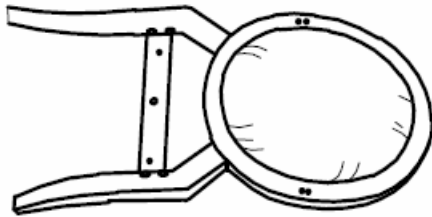

#### STEP 2.

2 Attach Seat Cushion and Back Cushion using Bolt with lock washer and Flat washer (G+C+A) for both L&R side using Bolt, lock washer and Flat washer (G+C+A) for centre hole. Tighten slightly not fully.

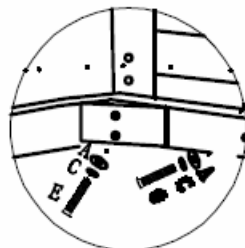

#### STEP 3.

3 Attach front leg using Bolt with washer and flat washer (A+C+H) and (B+D+H) for the Arm. Tighten slightly not fully.

Place the chair on the floor ensure chair upright leveling is all right. Tightening all screw fully.

