












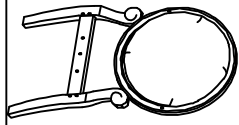





# ASSEMBLY INSTRUCTION

## LOT# KF91027 ARM CHAIR

PARTS LIST							
PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 5/16"X 3/4"		9	K	WOOD SCREW		6
B	LOCK WASHER 5/16"		9	L	PLUG		2
C	BOLTS DIA 5/16"X3"		4	M	LEFT ARM		1
D	BOLTS DIA 5/16"X2-1/2"		4	N	RIGHT ARM		1
E	BOLTS DIA 5/16"X1 1/2"		1	O	CUSHION		1
F	ALLEN WRENCH 5/16"		1	P	SEAT FRAME		1
G	FLAT WASHER 1/4"X 5/8"		2	Q	CHAIR BACK		1
H	LOCK WASHER 1/4"		2				
I	BOLTS DIA 1/4"X1 1/2"		2				
J	ALLEN WRENCH 1/4"		1				

**Note: Do Not tighten bolts until assembly is fully completed.**

### STEP 1.

Remove all parts from carton and separate them into part number groups as indicated on the part list. Place the chair back (Q) on a smooth flat surface with the holes facing up. Loosely tighten all bolts until instructed to fully tighten at the end of step.

